



TOOLS REQUIRED DURING INSTALLATION

Please check the tools required prior to installation for the product.

- ◆ Ruler and measurement tape
- ♦ Gloves
- ◆ Utility knife and extra blade
- ♦ Knee pads
- ♦ Chalk line or ball pen
- ♦ Hacksaw carbide blade, carpenter's square
- ♦ Cleaning tools like towels, vacuum and mop
- ♦ Scraping tools like hammer and scraper



For best result, we recommend you to hire a flooring technician for this particular installations.





CHECK THE SUB FLOOR

Fab Floorings India's tiles can be stick on concrete, asphalt, or tile based surface. The information content for subfloor has been best of acknowledge.

SURFACE	RUBBER TILES		INTERLOCKING PVC TILES
	Interior	Exterior	(For Interior Use Only)
Concrete	Recommended	Recommended	Recommended
Plywood	Recommended	Recommended	Recommended
Asphalt	Recommended	Recommended	Not Recommended
Wood	Not Recommended	Not Recommended	Not Recommended
Tile	Recommended	Recommended	Recommended
Carpet	Not Recommended	Not Recommended	Not Recommended
Compact Gravel	Not Recommended	Not Recommended	Not Recommended
Roof Tops	Not Recommended	Not Recommended	Not Recommended



Rubber Tiles Installation




Hire a Flooring Technician

We recommended you hire rubber flooring technician for the installation.

Installation with Straight Edge

- Place your first tile with either against wall or existing border.
- Plan and calculate your space before installing.

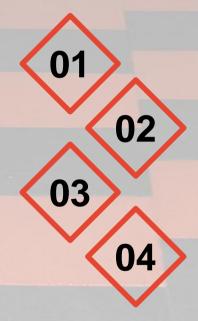

Clean Surface Required

The surface should be free from dust, oil and grease.

Measure the Area & Calculate Required Tiles Before Installation

Calculate the number of tiles required before installation. Keep in mind: shape of the surface area, pillars, round edges etc.

Interlocking Rubber Tiles Installation

Adhseve / Binder Not Required

The interlocking rubber tiles does not require any special type of adhesive or binder to stick.

Direction

Keep the heart shape in either right or left direction for best outcome result



Easy to Stick / Remove

It's easy to stick and easy to remove. It helps you in safety flooring in few minutes.



Cutting of Rubber Tiles



Cut Sharply

For cutting of tiles you must lay tile on flat surface and hold tiles and cut with sharp utility knife.

Use Hackshaw Tool

For best result you can use quality hacksaw tools.



Change the Blade Frequently

For large size of cutting you must change blade frequently for clean and sharp cuts.

May Use Another Kind of Cutting Tool

If the thickness is high as per customize order you may hire another types of cutting tools.

Choose Right Adhesive



Right Adhesive

Styrene butadiene copolymer (SBR) latex is a type of synthetic rubber adhesive that is durable and highly recommended for commercial and industrial use.

Don't Do

Don't place or spill adhesive on the top of tiles as it will destroy the material surface.



Correct Method

- You must wear hand gloves when using adhesive.
- You must apply adhesive on sub floor as well as on back side of tiles at every four corners and in middle.
- You must allow 48 hours to dry the site without contact of water, traffic or any other works.

Check the Chemical Property

You must check with chemical properties for any PU before installing tiles.





CLEANING AND MAINTENANCE

INITIAL CLEANING



Remove all loose debris and dust and any residual sand with broom or vacuum.

In case of heavy dirt, clean the flooring using a low speed mono brush equipped with light abrasive disc (red disc in the 3M scale) and PH neutral detergent. Wet vacuum, rinse several times and leave to dry.



Clean the floor covering with a PH neutral detergent using a mop or a combined wash/vacuum machine in larger areas.

MAINTENANCE



When standard cleaning operations are not sufficient to remove dirt, a deeper cleaning is recommended in order to restore the initial appearance of the flooring.

Remove dust, dirt and stains from the floor.



If necessary, restore the desired level of gloss using a spray buffing system.

